


1. During the ordering process, you will have selected either 'inside recess' or 'outside recess' measurements.

outside recess

follow face fix instructions

inside recess


follow top fix instructions

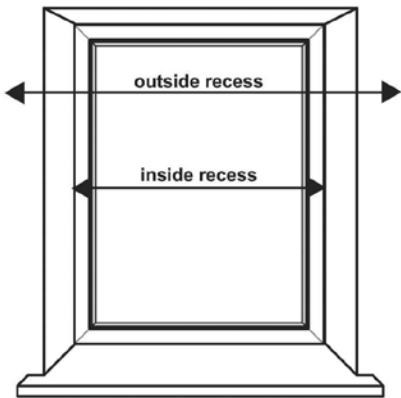


2. Face Fix

Each blind will be supplied with at least two brackets. Fit these brackets to the wall face approximately 5cm in from the ends of the blind.

The head rail just screws in place.

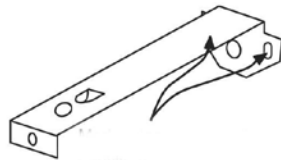


Mark holes on the wall using a pencil. Drill holes, insert rawl plugs then fix bracket to wall.

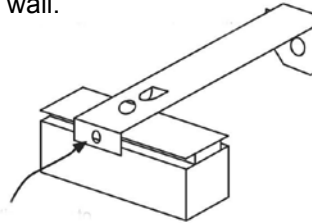


Tighten the screw to secure the head rail in position.

3. Top Fix

 Each blind will be supplied with at least two brackets. Fit these brackets to the lintel approximately 5cm in from the ends of the blind. The head rail just clips in place.




Mark holes on the wall using a pencil. Drill holes, insert rawl plugs then fix bracket to wall.

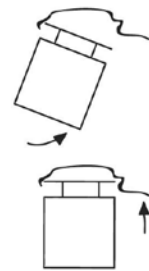


To fit the head rail to the brackets, hook the front of the head rail into the bracket.

Push the back of the blind into the bracket so that it clicks into place. Push the lever upwards if you wish to release the head rail.


4. Once the head rail is fitted, the fabric vanes can be fitted. Hook a single vane onto each hook on the head rail.

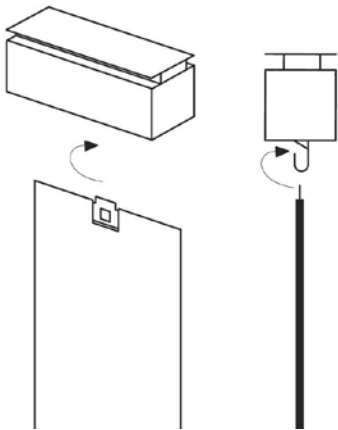


5. Fit the bottom chain to the fabric weights as shown. Use a single piece of bottom chain for the front and a separate piece for the back. Cut any spare with scissors.

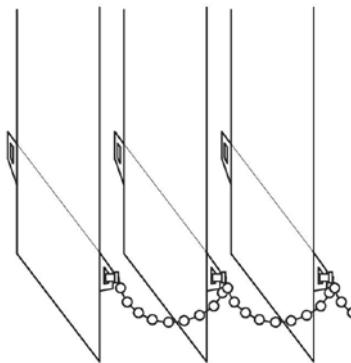

6. Fit the cord weight to the blind cord as shown.

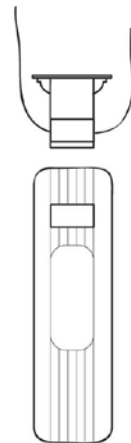

Pack Contents

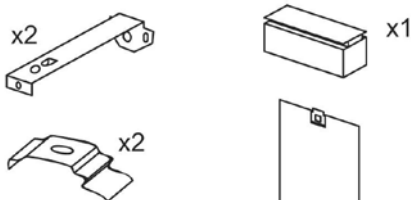

Suggested Tools

- Screwdriver
- Drill (5mm)
- Pencil
- Tape Measure
- Spirit Level